

# MegaPixel nEL-28x51c-SiPM-T



**MegaPixel nEL-28x51c-SiPM-T**

## Description



**Elpasolite™** MegaPixel nEL-28x51c-SiPM-T is a new gamma neutron CLYC(Ce)-based solid state radiation detector made in the USA. Our proprietary crystal growth and encapsulation processes improve excellent properties of CLYC(Ce) and combine them with all the benefits of cutting edge SiPM technology. Build-in temperature sensor allows precise monitoring of SiPM/crystal temperature. nEL scintillator has a light yield of about 20,000 ph/MeV of gamma energy and 70,000 ph/neutron while energy resolution is about 6% with SiPM readout. A longer decay time of nEL under neutron excitation allows for easy discrimination between the neutron and gamma radiation using well-know pulse shape discrimination algorithms.

## Specifications

Shape	Cuboid
Detector type	Cs <sub>2</sub> LiYCl <sub>6</sub>
Detector size	28x28x50.8 mm
Energy range	From 20 keV
Typical resolution	6% at 662 keV
Typical sensitivity to gamma radiation, cps/(μSv·h <sup>-1</sup> )	635 ( <sup>137</sup> Cs) 480 ( <sup>60</sup> Co)
Neutron detection	Yes
Readout	4x4 6mm SiPMs
Dimensions	31x31x64 mm
Weight	150 g
Additional Features	Fast and standard outputs. Integrated temperature sensor

## Benefits

- Sensitive to gamma and neutron radiation
- High sensitivity – 40 cc of Elpasolite (CLYC) scintillator
- Ultra compact design
- Fully solid state detector not sensitive to magnetic field
- Low bias requirements: 26-32V
- No international shipping restrictions
- Sensor for Temperature-compensated Multichannel Analysis
- Operating temperature: -40 to 55 °C




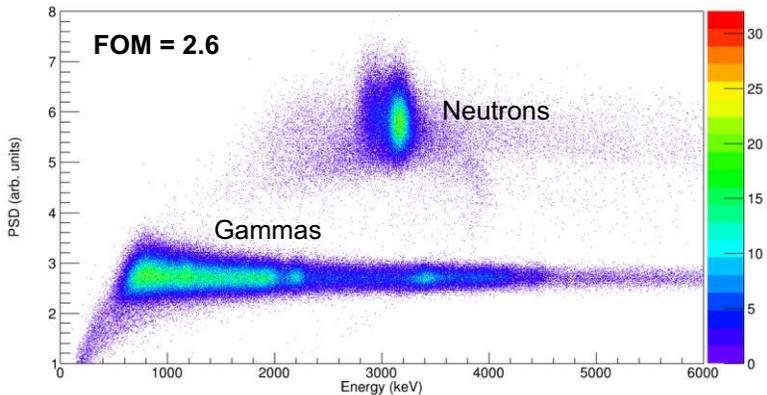
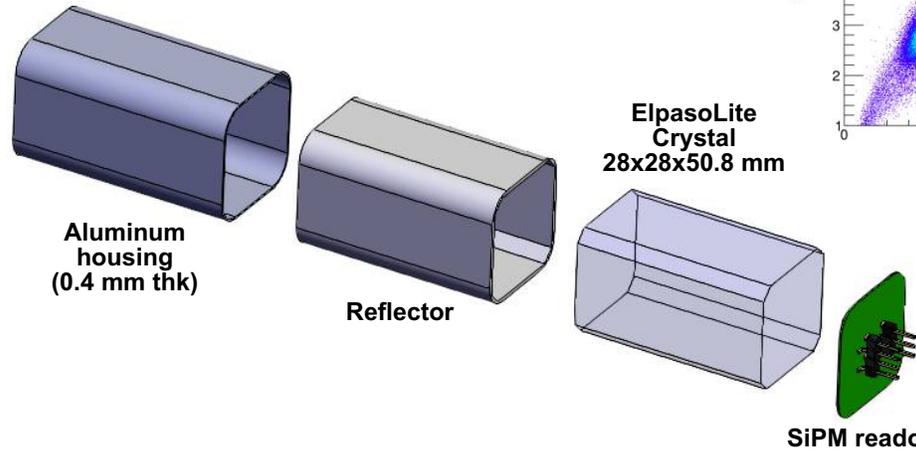


nEL crystals incorporate 7% 6-Li permitting thermal neutron detection, while Cl-35 enables fast neutron detection. The emission of nEL is comprised of fast core-valence luminescence (CVL) and Ce related emission resulting in two main decay components. Absence of CVL under neutron excitation allows for easy discrimination between the neutron and gamma radiation. An FOM value of 2.6 was achieved using a Pu/Be neutron source.

# MegaPixel nEL-28x51c-SiPM-T




## Unambiguous Identification with Elpasolite (All spectra taken with MacroPixel nEL-14x25c-SiPM-T detector assembly)

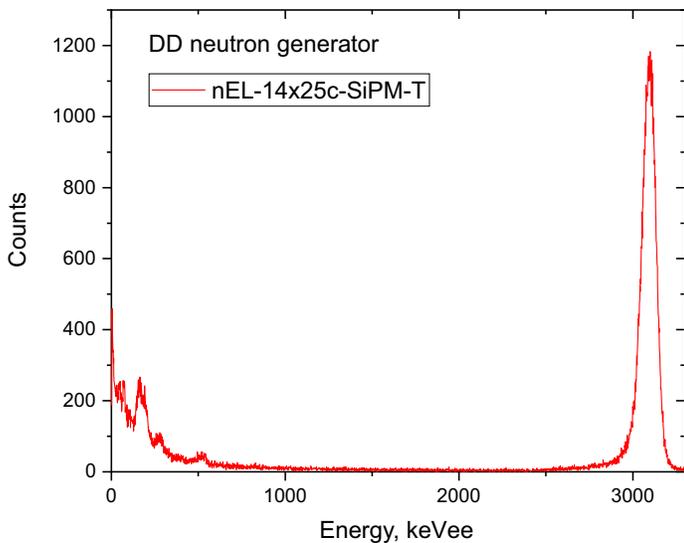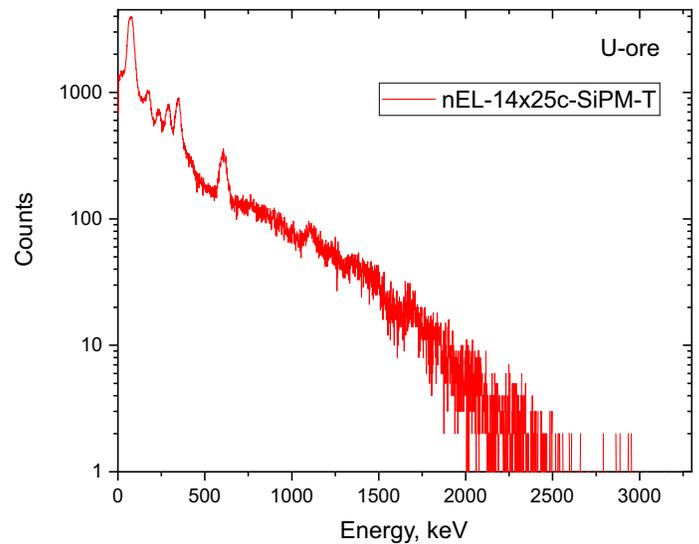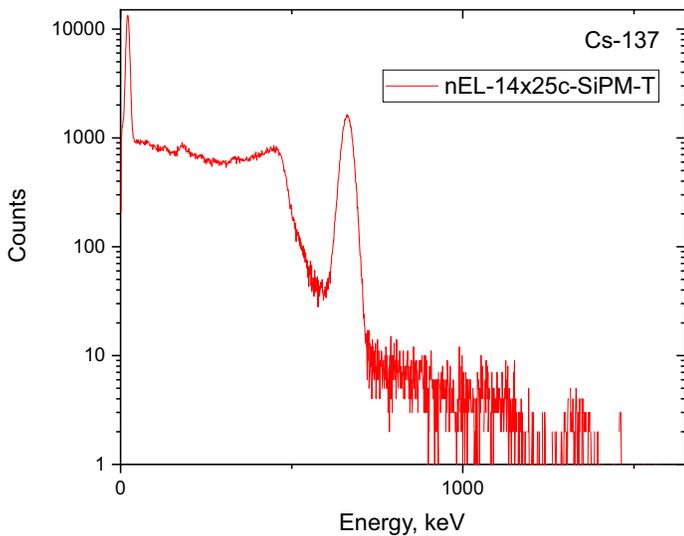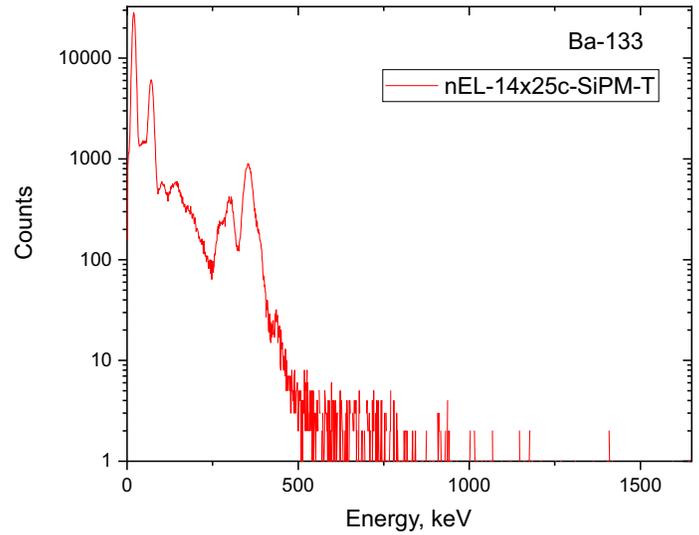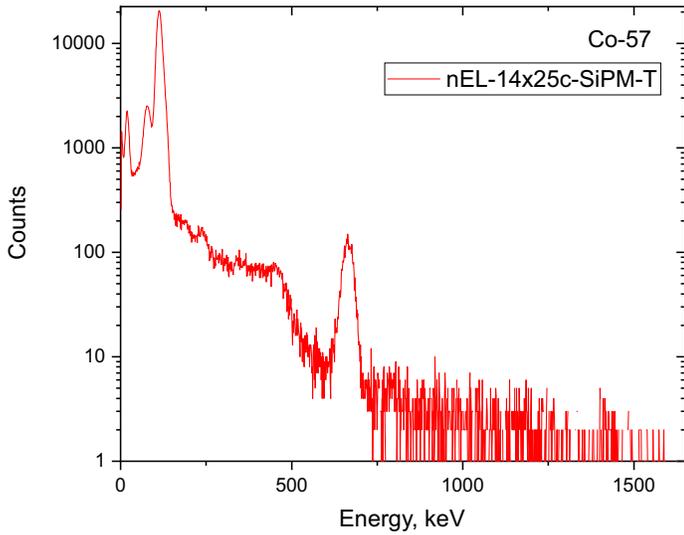



# MegaPixel nEL-28x51c-SiPM-T




## 2D drawing

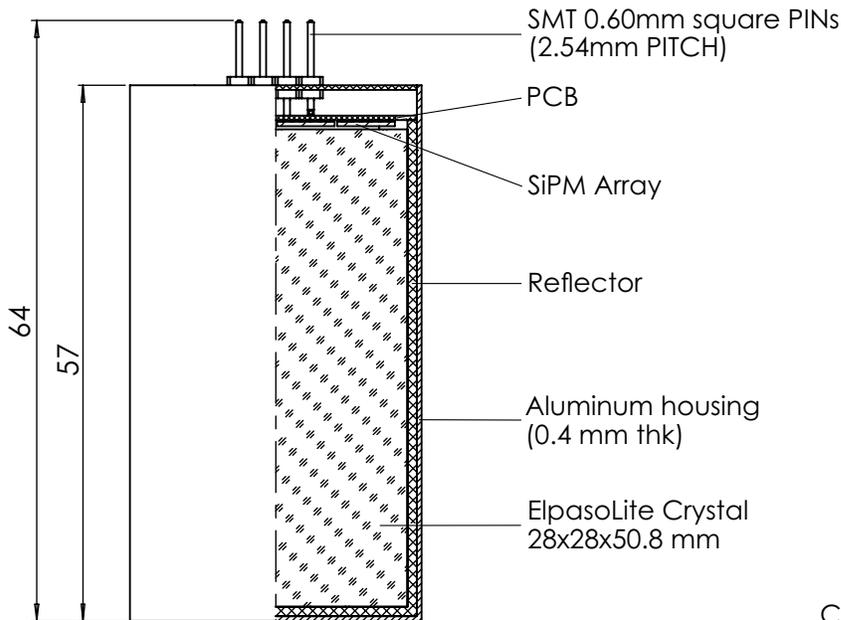

SCALE 1:1

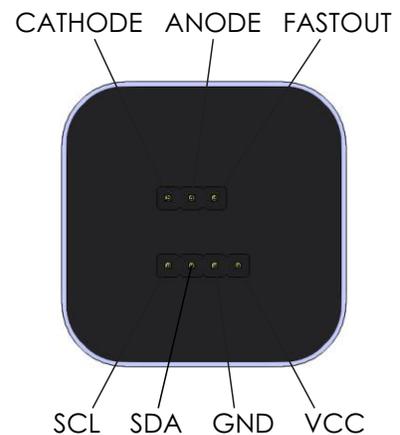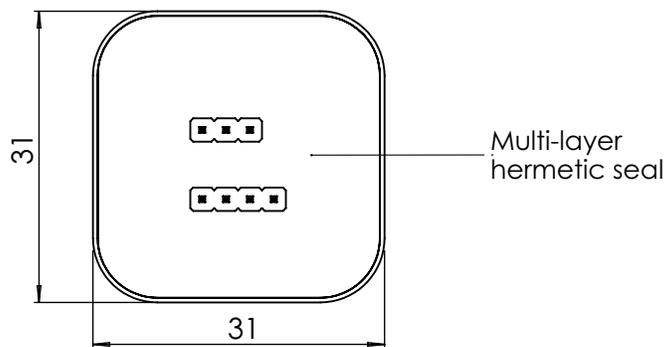

## Block Diagram

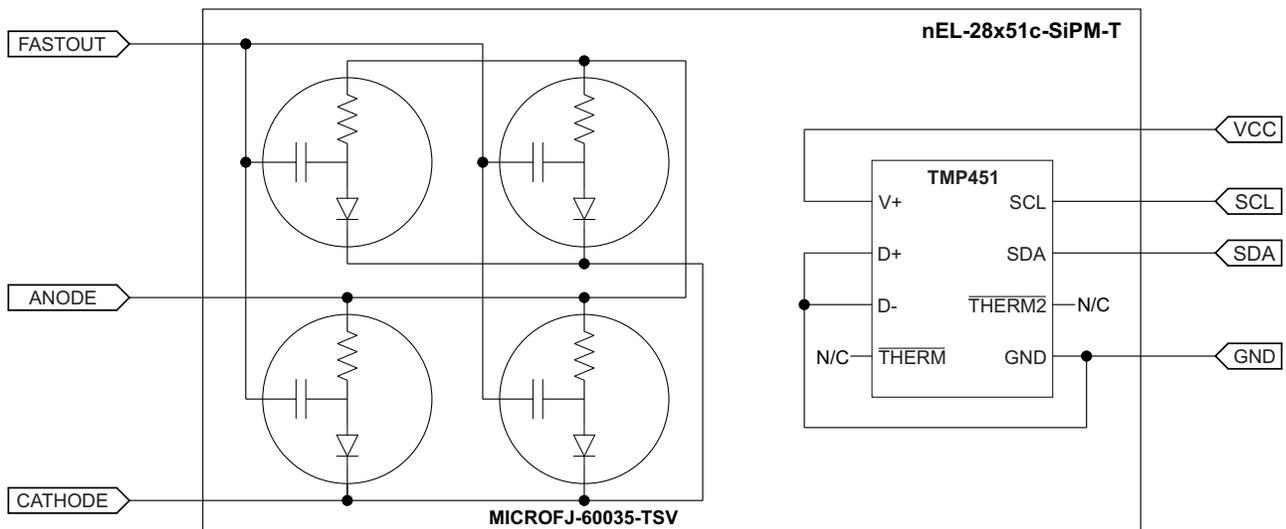

# MegaPixel nEL-28x51c-SiPM-T








## Biasing Alternatives & Signal Polarity

This Appendix lists all of the possible ways in which a J-Series SiPM can be biased. For each biasing arrangement, the standard and fast signal polarities are given. **A** and **B** are the recommended configurations. **C** and **D** will work, but are not recommended for use with the fast output. The following abbreviations are used throughout:

- $V_{bias}$  = bias voltage
- $S_{out}$  = standard output
- $F_{out}$  = fast output
- $R_s$  = load resistor for the standard output
- $R_f$  = load resistor for the fast output
- $V_s$  = standard output voltage
- $V_f$  = fast output voltage
- $R_Q$  = quench resistor (included on the SiPM die)
- $C_1$  = decoupling capacitor 10nF (50V), low ESR, ceramic

CATHODE ANODE FASTOUT

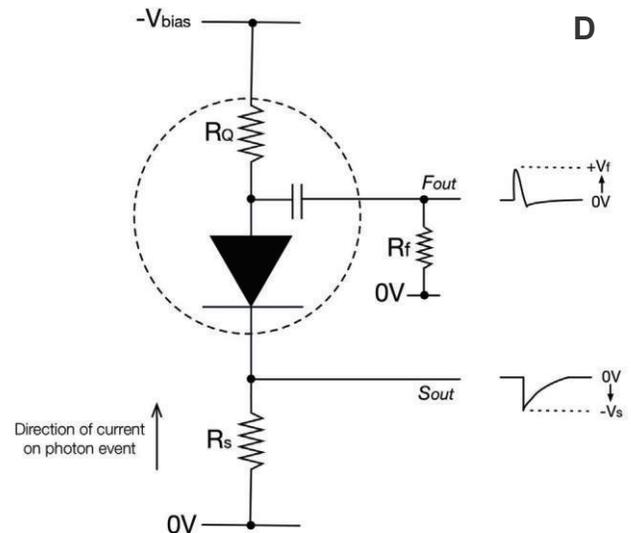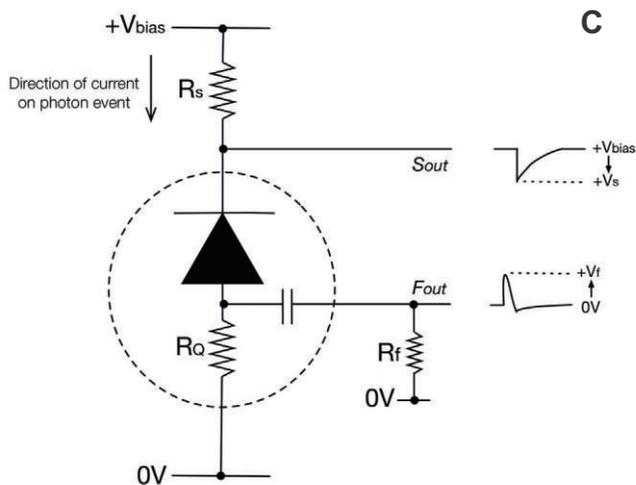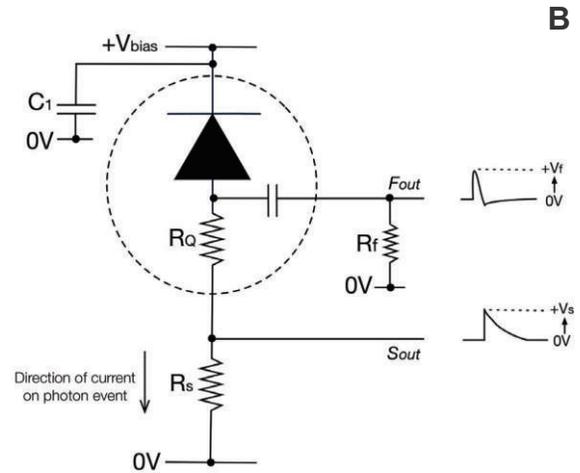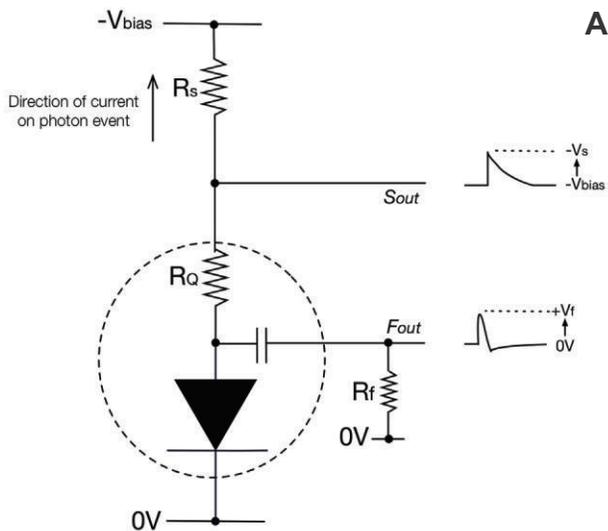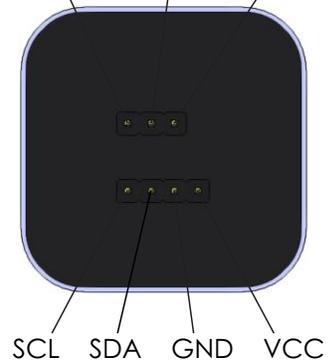

Ref.: J-Series High PDE and Timing Resolution, TSV Package, Datasheet, SensL

# MegaPixel nEL-28x51c-SiPM-T





## TMP451 Temperature Sensor

The TMP451 device is a high-accuracy, low-power remote temperature sensor monitor with a built-in local temperature sensor.

- $\pm 1^\circ\text{C}$  Accuracy Diode
- 1.7-V to 3.6-V Supply and Logic Voltage Range
- 27- $\mu\text{A}$  Operating Current
- The temperature is represented as a 12-bit digital code
- Two-Wire and SMBus™ Serial Interface
- The sensor is (SANs) specified for operation over a supply voltage range of 1.7 V to 3.6 V and a temperature range of  $-40^\circ\text{C}$  to  $125^\circ\text{C}$ .

### Typical Application

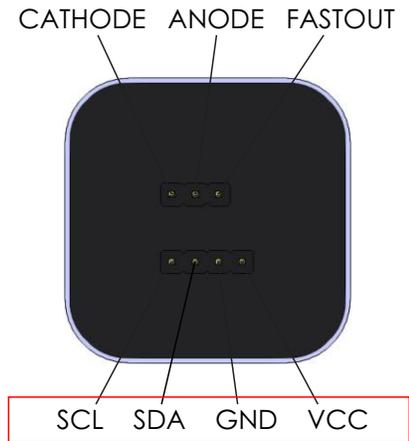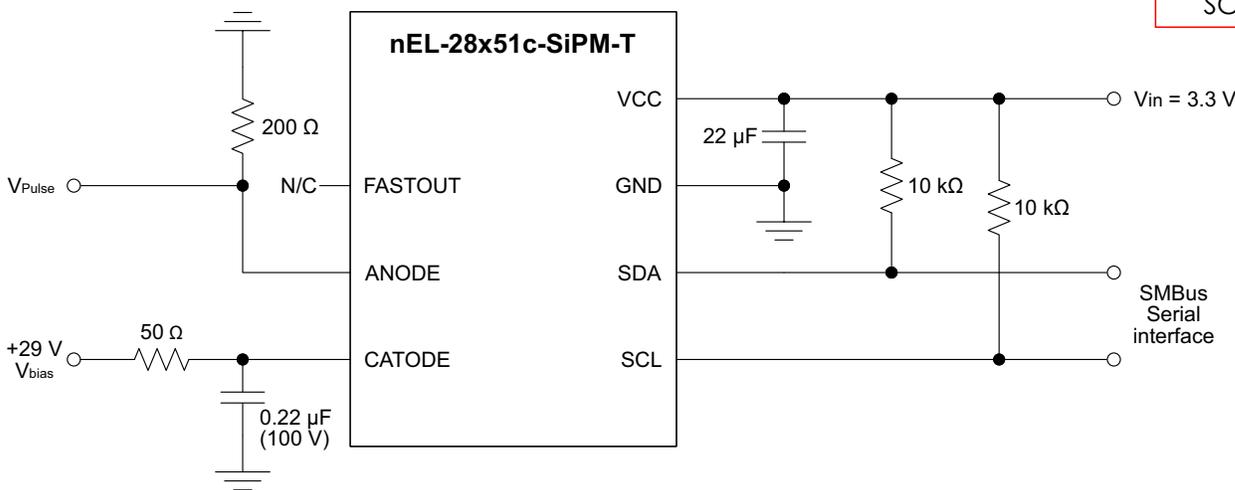

### Pin Functions

PIN NAME	TYPE	DESCRIPTION
SCL	Digital input	Serial clock line for SMBus. Input; requires pullup resistor to voltage between 1.7 V and 3.6 V if driven by open-drain output.
SDA	Bidirectional digital input-output	Serial data line for SMBus. Open-drain; requires pullup resistor to voltage between 1.7 V and 3.6 V.
GND	Ground	Supply ground connection.
VCC	Power supply	Positive supply voltage, 1.7 V to 3.6 V.

### Absolute Maximum Ratings

Over operating free-air temperature range, unless otherwise noted.<sup>(1)</sup>

	MIN	MAX	UNIT
Power supply (VCC)	-0.3	3.6	V
Input voltage (SDA and SCL)	-0.3	3.6	V
Input current		10	mA
Operating temperature	-55	127	$^\circ\text{C}$
Junction temperature ( $T_{jmax}$ )		150	$^\circ\text{C}$
Storage temperature ( $T_{stg}$ )	-60	150	$^\circ\text{C}$

(1) Stresses above these ratings may cause permanent damage. Exposure to absolute maximum conditions for extended periods may degrade device reliability. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those specified is not implied.

### Recommended Operating Conditions

Over operating free-air temperature range (unless otherwise noted)

	MIN	NOM	MAX	UNIT
Supply voltage	1.7	3.3	3.6	V
Operating free-air temperature ( $T_A$ )	-40		125	$^\circ\text{C}$


Ref.: TMP451 / SBOS686A – JUNE 2013 –  
REVISED DECEMBER 2014 /  
Texas Instruments



### About CapeScint

CapeScint is a subsidiary of CapeSym, Inc. a multi-faceted company with 100+ years of combined experience in scintillators, semiconductors, and radiation detection instruments. CapeScint has its warehouse facilities and customer support staff located in Greater Boston Area, Massachusetts, USA.

Founded in 1992 as Cape Simulations, CapeSym, Inc. is now a multi-faceted company offering novel technical crystals and detectors for nuclear detection, including ScintiClear<sup>TM</sup> SrI<sub>2</sub>(Eu) and Elpasolight<sup>TM</sup> CLYC(Ce) scintillators. In addition, CapeSym offers radiation detection instruments and equipment through [www.zievert.com](http://www.zievert.com).

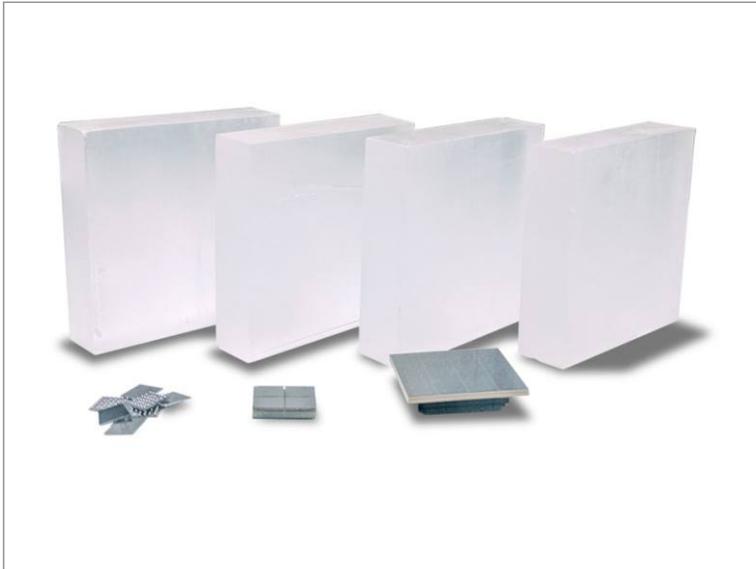

Our ongoing R&D leverages decades of experience in crystal growth, solid state physics, analytical chemistry, materials science, thermo-fluid transport, and engineering design. CapeScint as a subsidiary of CapeSym, Inc. has a long history working with the US Government as a contractor and as a supplier of essential goods and services. During the last 30 years CapeSym, Inc. and supported missions of multiple US Government agencies including NASA, MDA, USAF, DoE, DTRA, NIH, CWMD, and US Navy.



*Design and specifications are subject to change without notice*